


EXCLUSIVES COLLECTION

PARTS CATALOG

CONTENTS

Control Panel/Control Box _____	1
J-Pump/Motor Assembly _____	2
16 Amp, 115 Volt Pump/Motor Assembly (W/O Switch) _____	3
Bath Heater _____	4
Suction Cover/Fitting Assembly _____	5
HTE Jet _____	6
HTA Jet _____	7
BMH Jet _____	8
3-Position Control Panel _____	9
1-Position Control Panel _____	10


CONTROL PANEL/CONTROL BOX

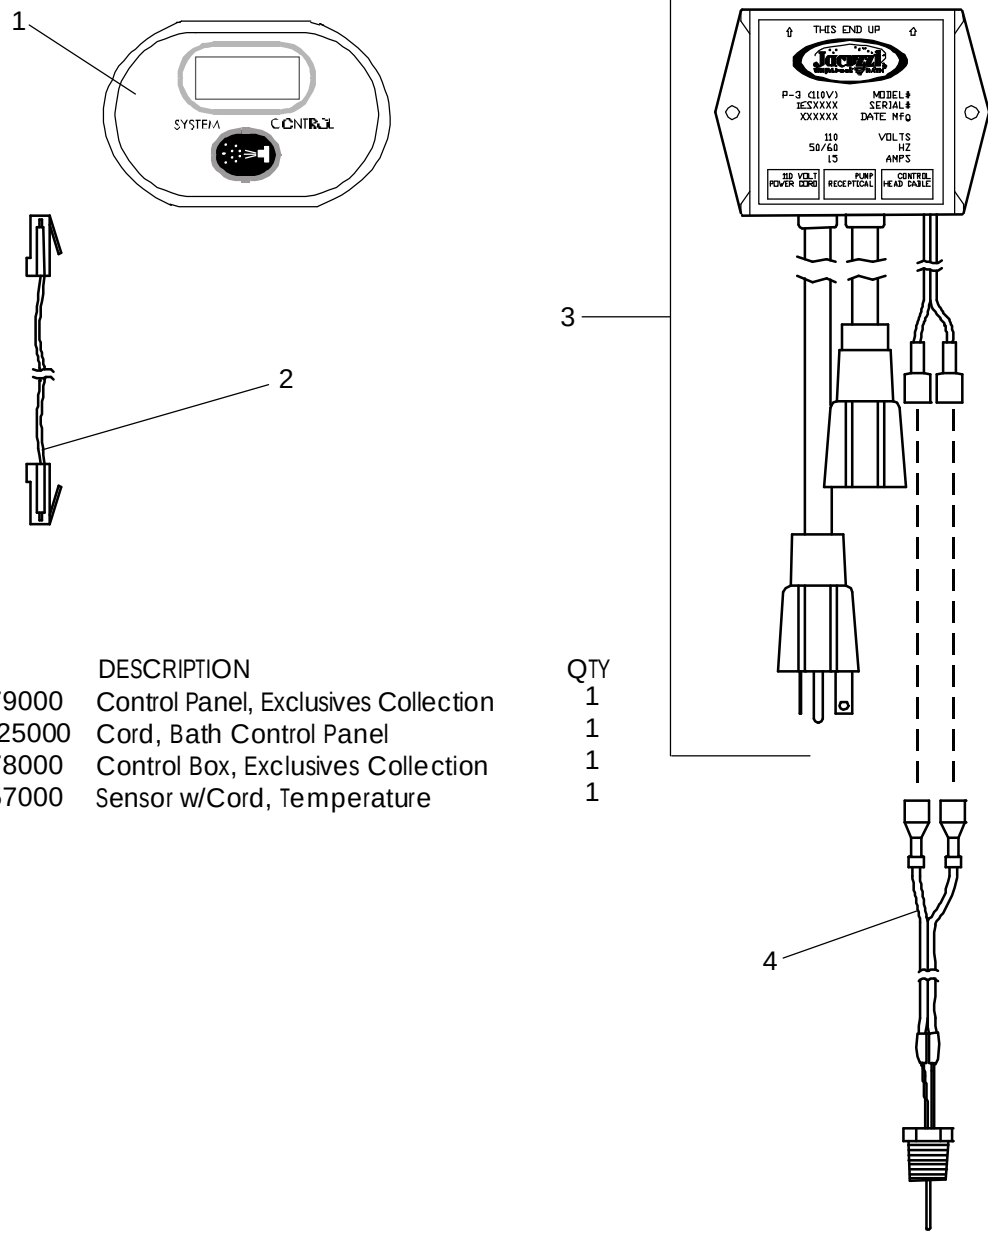

ITEM	P/N	DESCRIPTION	QTY
1	P779000	Control Panel, Exclusives Collection	1
2	M825000	Cord, Bath Control Panel	1
3	P778000	Control Box, Exclusives Collection	1
4	P657000	Sensor w/Cord, Temperature	1

J-PUMP/MOTOR ASSEMBLY


NOTE: When installing
Union Adapter(s)
hand-tighten only.

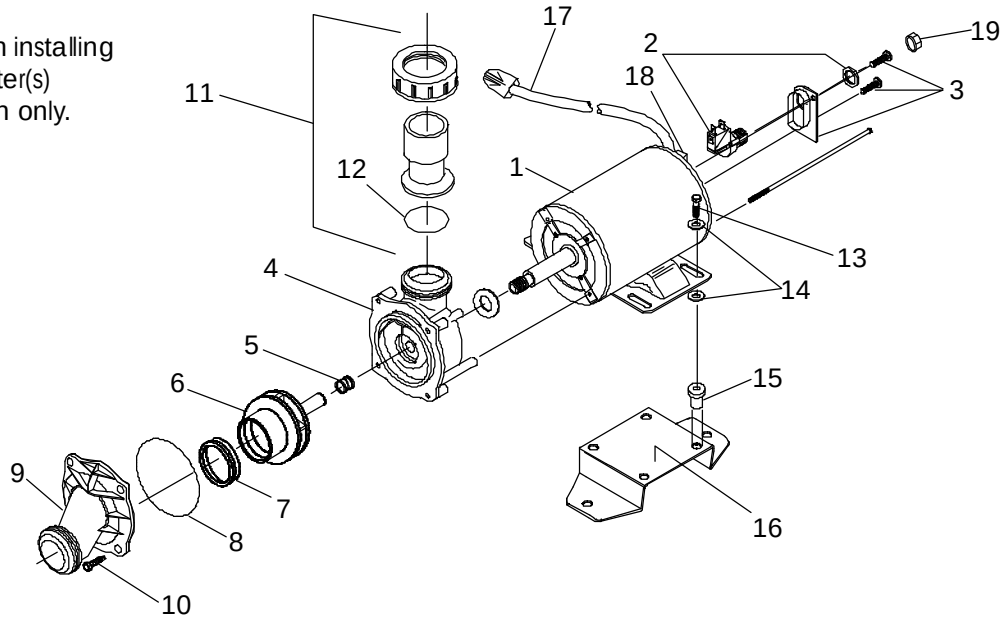

ITEM	P/N	DESCRIPTION	QTY
1	C049000	Motor Assy, Low (10 Amp), W/Cord & Switch	1
2	7396000	Switch, SPDT, 21 Amp, Air Actuated	1
3	E698000	Enclosure, Air Switch	1
4	F156000	Bracket, J-Light	1
5	9245000	5/8" Mechanical Seal	1
6	9221000	Impeller, Low, J-Pump	1
7	9243000	IEye Seal	1
8	9246000	O-Ring	1
9	F157000	Suction Flange, J-Light	1
10	F158000	Screw, Hex, Wshr Hd, 1/4-14 x 1.00"L.	4
11	9250000	Repair Kit, Union Adapter	1
12	9231000	O-Ring, Union	1
13	3945832	Bolt, Hex, 1/4-20 x 1.00"L.	4
14	3982832	Washer, 1/4 Flt, Type A Pln Wd Ser	8
15	9216000	Wellnut, Rubber, 1/4-20	4
16	H333000	Bracket, Motor, 2" High	1
17	C843000	Cord, Power Supply, 115V, 15A, 3 Ft.	1
18	2133000	Ground Lug	1
19	N186000	Strain Relief, Air Switch	1


16 AMP, 115 VOLT PUMP/MOTOR ASSEMBLY (W/O SWITCH)

NOTE: When installing
Union Adapter(s)
hand-tighten only.

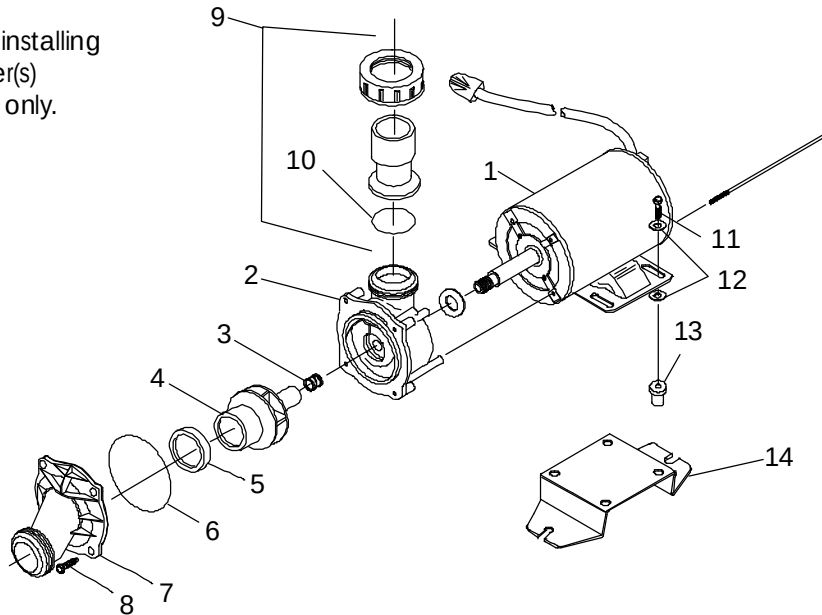

ITEM	P/N	DESCRIPTION	QTY
1	R378000	Motor/Cord W/O Switch, 16A, 115V	1
2	F156000	Brack, J-Light	1
3	9245000	5/8" Mechanical Seal	1
4	C117000	Impeller, High, J-Pump	1
5	9243000	Eye Seal	1
6	9246000	O-Ring	1
7	F157000	Suction Flange, J-Light	1
8	F158000	Screw, Hex, Wshr Hd, 1/4-14 x 1.00"L.	4
9	9250000	Repair Kit, Union Adapter	1
10	9231000	O-Ring, Union	1
11	3945832	Bolt, Hex, 1/4-20 x 1.00"L.	4
12	3982832	Washer, 1/4 Flt, Type A Pln Wd Ser	8
13	9216000	Wellnut, Rubber, 1/4-20	4
14	H333000	Bracket, Motor, 2" High	1


BATH HEATER

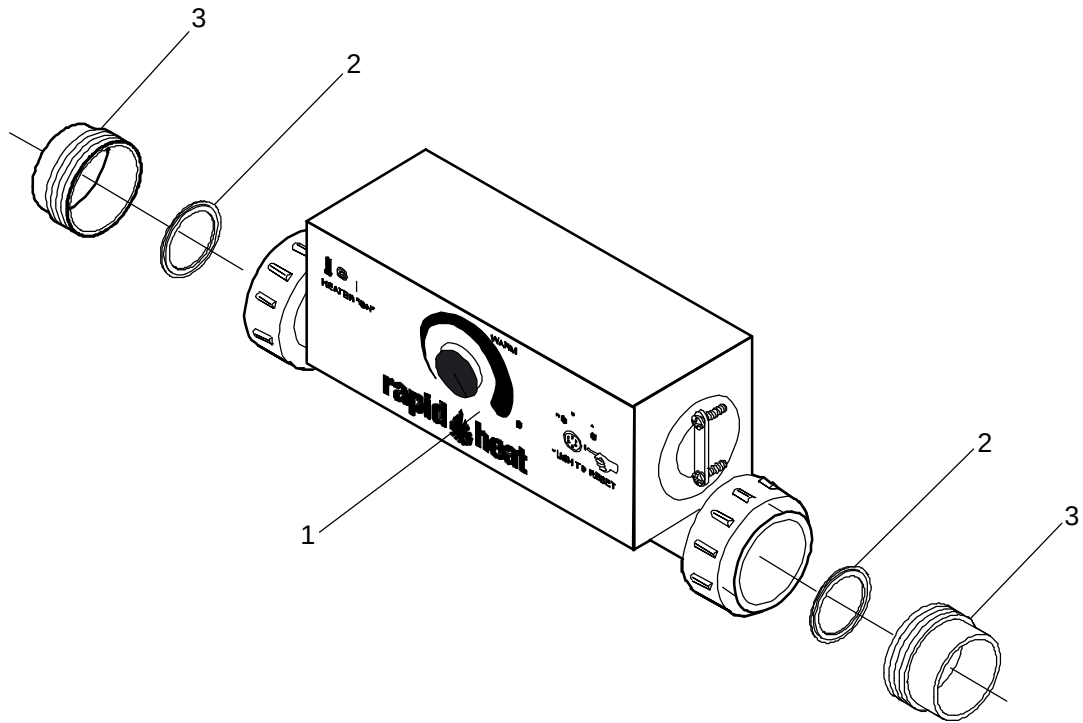

ITEM	P/N	DESCRIPTION	QTY
1	G903000	Heater, Bath, 1.5 kW, 120 V	1
2	G947000	Gasket, Union, 2" Pipe	2
3	G946000	Union, Pipe, 2" I.D.	2


NOTE: Items 2 and 3 are included with Item 1.

SUCTION COVER/FITTING ASSEMBLY

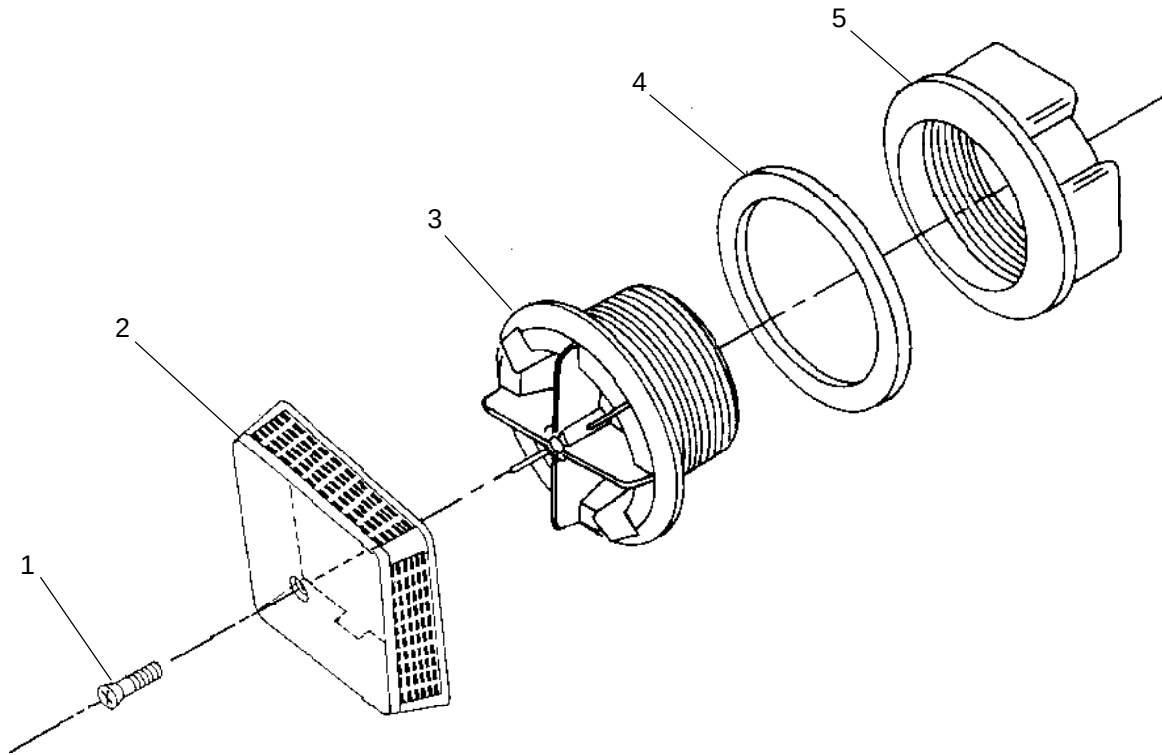


ITEM	P/N	DESCRIPTION	QTY
1	3959000	Screw, OHPM #10-24 x 2"L.	1
2	6651XXX	Suction Cover/Gasket Assembly	1
3	1958000	Suction Fitting Sub-Assembly	1
4	2136000	Ring, Back-Up	1
5	1643000	Locknut, Suction Fitting	1

HTE JET

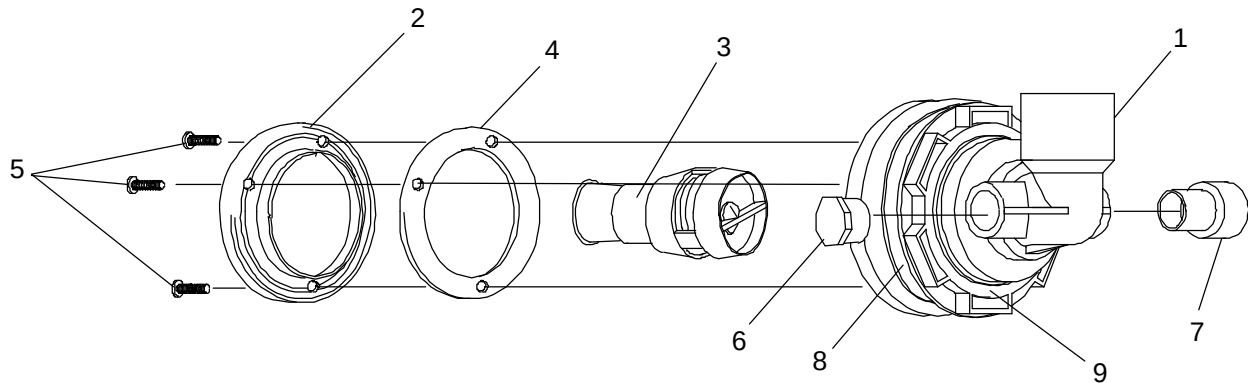

ITEM	P/N	DESCRIPTION	QTY
1	A320XXX	Body, HTC	1
2	A325XXX	Clamping Ring, HTC	1
3	P597XXX	Swivel Assembly, HTC Modified	1
4	1840000	Gasket, Clamping Ring	1
5	9356000	Screw, Thd Frm PHP #6-19 x .5"L.	3
6	B777000	Plug, 1/2" SPIG	1
7	C279000	Air Line Adapter	1
8	1836000	Back Up Ring, AMH	1
9	1835000	Lock-Nut, AMH	1

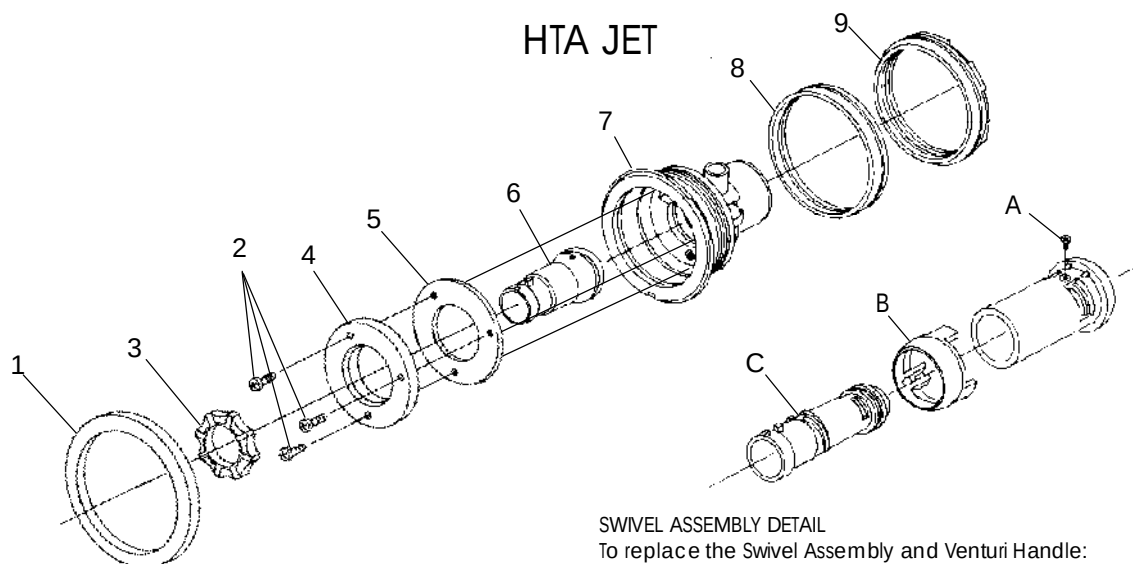


SWIVEL ASSEMBLY DETAIL

To replace the Swivel Assembly and Venturi Handle:
 Remove 3 screws securing clamping ring and gasket from jet body. Pull swivel ring B (see detail) away from swivel to expose retaining screw A. Remove screw A from swivel. Turn Venturi C counterclockwise until it is unscrewed and free from the swivel. Install new swivel assembly, securing it with clamping ring, gasket and 3 screws. Screws are properly tightened when the swivel assembly can still be manually moved from side to side, but tight enough to allow the Venturi handle to be turned to adjust water without turning the swivel. To install the handle, align the two portions of the swivel assembly with the notches on the handle and snap it on. NOTE: When installed, the handle is permanently in place; attempting to remove it will damage the snap-on feature of the handle.


ITEM	P/N	DESCRIPTION	QTY
1	4120827	Face Ring, HTA Chrome	1
1	4120828	Face Ring, HTA Gold	1
1	4120829	Face Ring, HTA Bright Brass	1
1	4120898	Face Ring, HTA Brushed Chrome	1
2	3967000	Screw, PHPM #8-32 x .50"L.	3
2	4043828	Screw, PHPM #8-32 x .50"L., Gold	3
2	4043829	Screw, PHPM #8-32 x .50"L., Bright Brass	3
3	3641827	Venturi Handle, Chrome	1
3	3641828	Venturi Handle, Gold	1
3	3641829	Venturi Handle, Bright Brass	1
3	7277XXX	Venturi Handle, Color Select	1
4	7758XXX	Clamping Ring, HTA, Color Select	1
5	1928000	Gasket, Clamping Ring, HTA	1
6	4881XXX	Swivel Assy, HTA, Color Select	1
7	1644XXX	Body, HTA Jet, Color Select	1
8	1925000	Back-Up Ring, HTA Inlet	1
9	1645000	Nut, HTA Inlet	1

BMH JET

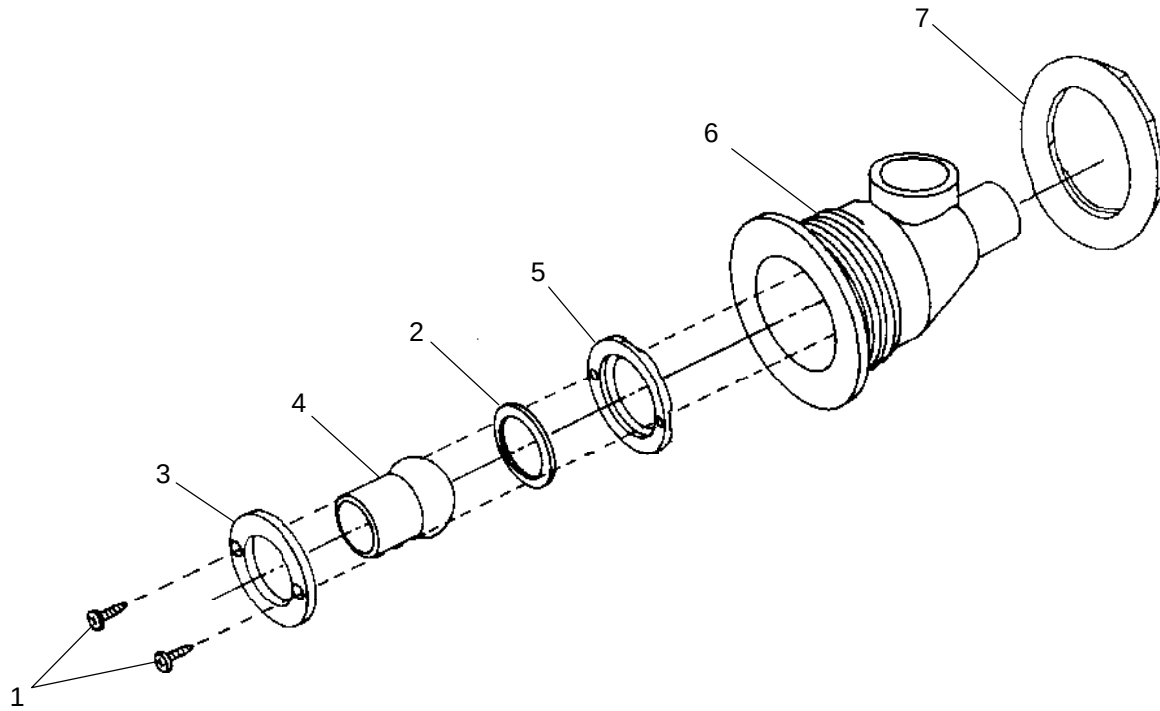

ITEM	P/N	DESCRIPTION	QTY
1	7514000	Screw, Thread Cutting, PHP #4	2
2	8488000	O-Ring, .926 I.D. x .70	1
3	8412XXX	Retainer, Nozzle-BMH	1
4	8413XXX	Nozzle, BMH	1
5	8487XXX	Internal O-Ring Seat	1
6	8411XXX	Body, BMH	1
7	8415000	Nut, BMH	1
N.S.	H685827	Face Ring, BMH, Chrome	1
N.S.	H685829	Face Ring, BMH, Bright Brass	1


3-POSITION CONTROL PANEL

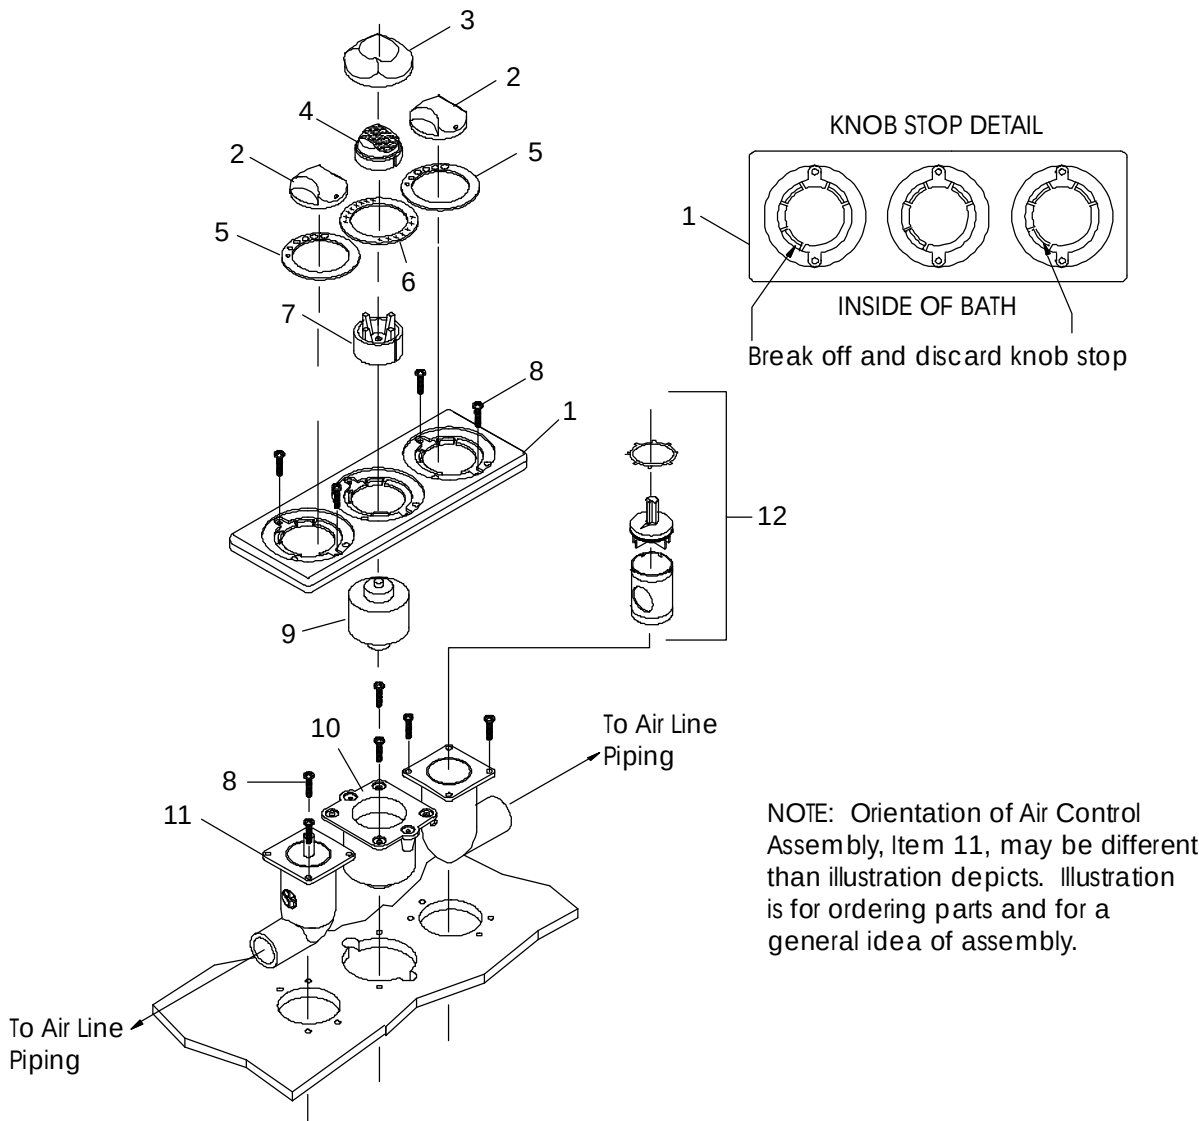

ITEM	P/N	DESCRIPTION	QTY
1	9224XXX	Panel, 3-Position	1
2	8267XXX	Knob, .25 Shaft Assembly	2
3	8247XXX	Bezel, Actuator	1
4	8246XXX	Button, Air Actuator	1
5	8263000	Ring, Graphic, Air	2
6	8262000	Ring, Graphic, ON-OFF	1
7	C842000	Guide, Air Actuator	1
8	9724000	Screw, Thd Ctg, 4-24 x .5	10
9	C377000	Bellows, Air Actuator	1
10	C841000	Cup, Air Actuator	1
11	7510000	Air Control Assembly	2
12	8399000	Repair O-Ring/Valve Assembly	2

When Item 11 is ordered, Item 12 is included. Item 12 can be ordered separately.

1-POSITION CONTROL PANEL

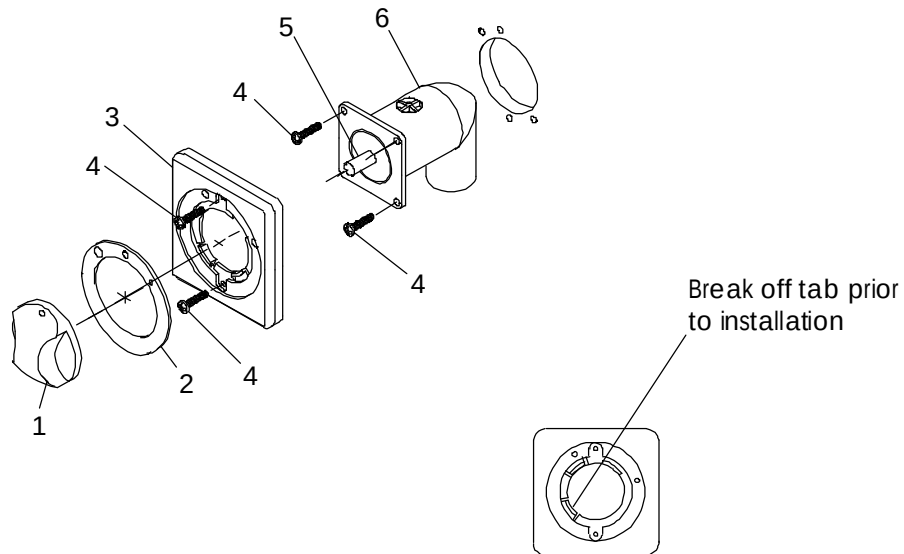

NOTE: Orientation of Air Control Assembly, Item 11, may be different than illustration depicts. Illustration is for ordering parts and for a general idea of assembly.

ITEM	P/N	DESCRIPTION	QTY
1	8267XXX	Knob, .25 Shaft, Assembly	1
2	8263000	Ring, Graphic, Air	1
3	D851XXX	Panel, 1 Position	1
4	9724000	Screw, Thd Ctg. 4-24 x .5 Ty 25	4
5	8399000	Repair O-Ring/Valve Assembly	1
6	7510000	Air Control Assembly	1

PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
USE INSTALLATION INSTRUCTIONS SUPPLIED WITH PRODUCT.

Service Support: (800) 288-4002